

## 9.5 TROUBLESHOOTING

### PROBE ALARMS

When one of the probes is outside the nominal operating range or in the case of probe open or in short circuit an alarm is generated. The alarm condition is indicated with displaying of the following error codes:

**PR1** = Chamber probe fault

**PR3** = Card probe fault

The alarm LED is activated.

### ACTIONS ON THE CONTROL IN PROGRESS

#### CHAMBER PROBE

The chamber probe error condition causes the following actions:

- displaying of the code **PR1**
- deactivation of the oven

When the faulty chamber probe condition stops, control resumes normally.

#### CARD PROBE

The card probe error condition causes the following actions:

- displaying of the code **PR3**
- total deactivation of the card and oven



### CAUTION

*When the faulty card probe condition stops, the adjustment does NOT resume normally and the oven must be turned off at the switch.*

### ERROR MESSAGES

CODE	MEANING
PR1	error probe 1
PR2	error probe 2
PR3	error probe 3